

# **OPTRON *vision***

## **User Guide**

Vers. 1.1  
©OPTRON Assistive  
Technologies 2006




## Contents:

<b>1 The OPTRON VISION: Parts and Pieces.....</b>	<b>3</b>
1.2 Overall view.....	3
1.3 Ports.....	3
1.4 Control Panel .....	4
1.5 Control Panel Base.....	4
<b>2 Getting the OPTRON vision ready .....</b>	<b>5</b>
2.1 Setting up the OPTRON <i>vision</i> .....	5
2.2 Connecting the OPTRON <i>vision</i> to the power supply .....	5
2.3 Connecting the OPTRON <i>vision</i> to a VGA Monitor .....	5
2.4 Turning on the OPTRON <i>vision</i> .....	6
2.5 Connecting a Television to the OPTRON <i>vision</i> .....	6
2.6 Connecting the OPTRON <i>vision</i> to a computer/laptop via USB.....	7
2.7 Connecting the OPTRON <i>vision</i> to a computer/laptop via TV Card.....	7
<b>3 Working with the OPTRON <i>vision</i>.....</b>	<b>9</b>
3.1 Desktop/Close distance viewing .....	9
3.2 Using the OPTRON <i>vision</i> to see objects at a larger distance .....	9
3.3 Zooming in and out.....	10
3.4 Auto focus on/off .....	10
3.5 Reversed Polarity.....	10
3.6 Selecting Monochrome Colors .....	10
3.7 Changing the clamp height.....	11

# 1 THE OPTRON VISION: PARTS AND PIECES


## 1.2 Overall view

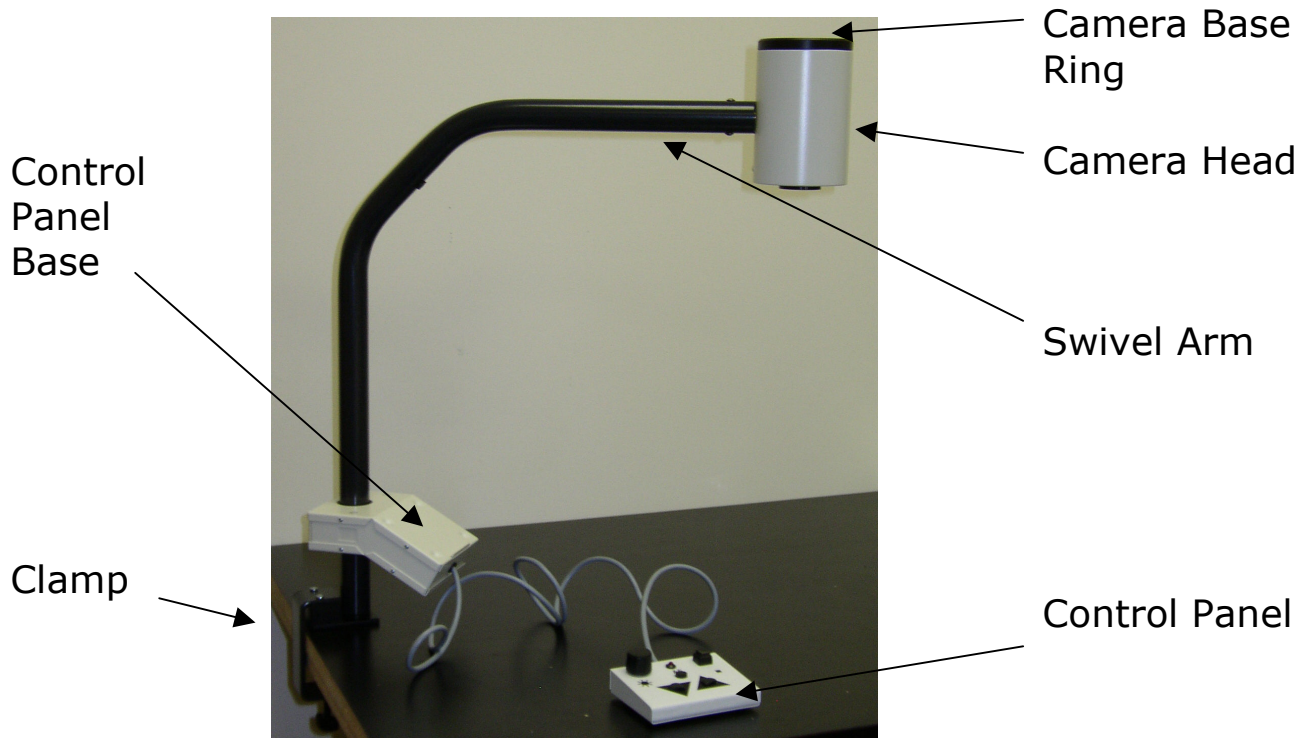


## 1.3 Ports



## 1.4 Control Panel

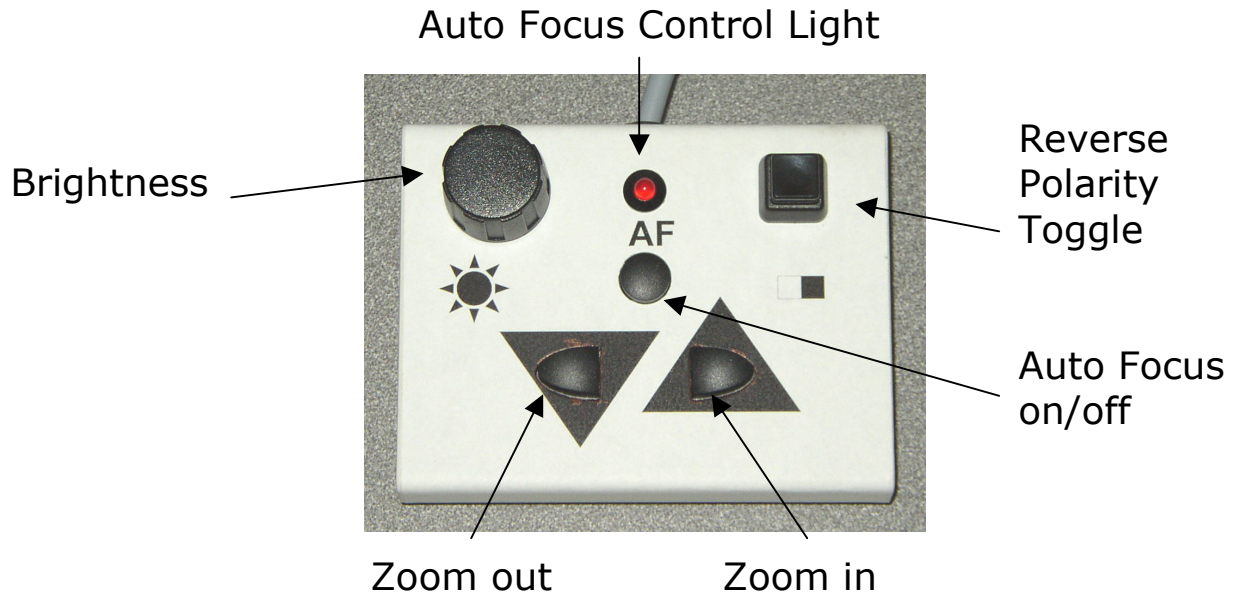

## 1.5 Control Panel Base

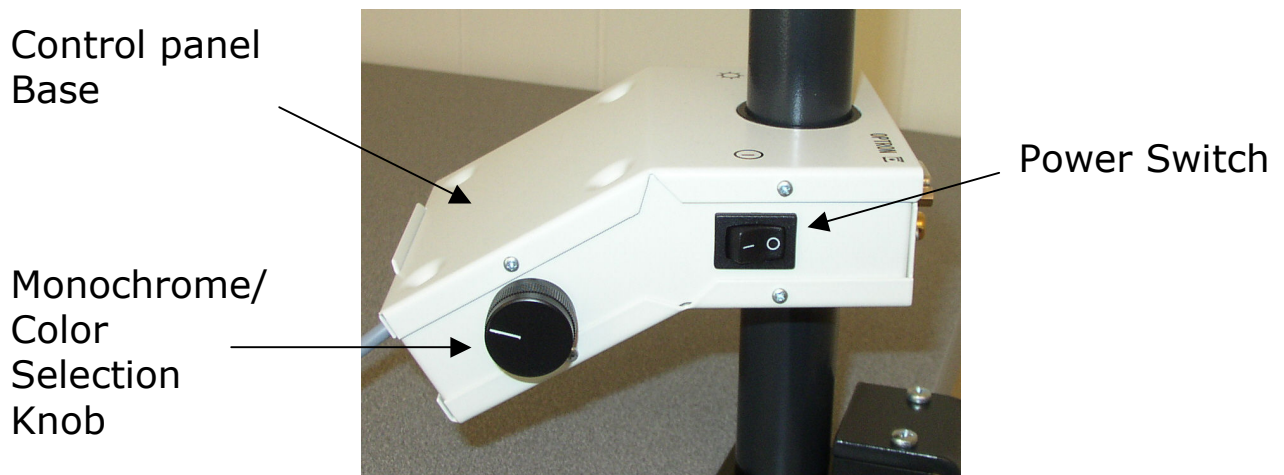

---

## 2 GETTING THE OPTRON VISION READY

### 2.1 Setting up the OPTRON vision

- Mount the *Clamp* to a desk or table. To make sure that the surface of your table will not be scratched by the *Clamp*, test mount the *Clamp* first on a hidden spot of your table. If you notice that your table is likely to be scratched, use a thin plastic shim between the *Clamp* and the table.
- Make sure that the clamp is tightly fixed to the table.
- Insert the *Swivel Arm* carefully into the notch of the *Clamp*.
- Make sure again that the *Clamp* is connected tightly by carefully turning the swivel arm. Retighten the *Clamp* if necessary.

### 2.2 Connecting the OPTRON vision to the power supply

- Insert the round plug on the power supply cable into the black *Power Socket* on the back of the OPTRON *vision's* control panel base.
- Connect the power cable to the power supply first and then to an wall socket. It is highly recommended to use a high quality surge protector. OPTRON ASSISTIVE TECHNOLOGIES cannot be responsible for damage caused by electric surge.

### 2.3 Connecting the OPTRON vision to a VGA Monitor

- Set up your VGA monitor according to the monitor instructions. If the VGA cable is not attached to the

monitor, plug one end of the monitor's VGA cable into the VGA port on your monitor

- Connect the other end of the cable to the *Monitor Port* on the back of the OPTRON *vision's* control panel base.



Please note:

Please be careful to insert the plug the right way and not to bend or break the pins on the cable.

If you connect a TFT monitor to your OPTRON *vision*, you might encounter a blurry and unsteady picture with vertical stripes. If this is the case, open the setup/control menu on your monitor, go to „clock“ and move the clock value slowly up or down. You will notice that either increasing or decreasing the value will reduce the number of vertical stripes on your monitor. You should be able to find a clock value without any stripes at all.

## **2.4 Turning on the OPTRON *vision***

- Turn on your monitor. Turn on your OPTRON *vision* by pushing the *Power Switch* to the "ON" position.

## **2.5 Connecting a Television to the OPTRON *vision***

To connect a television to your OPTRON *vision* use a composite video cable (not included).

- Turn off your OPTRON *vision* and your television.
- Connect one end of the cable to the composite "Video In" port on your television.
- Connect the other end to the *Direct Out Port* on your OPTRON *vision*.
- Turn on both devices.



**Please note:**

**When using the *Direct Out Port* on your OPTRON *vision* as the connection port to a display, you cannot use the brightness dimmer, the line reader, reversed polarity nor monochrome color.**

## **2.6 Connecting the OPTRON *vision* to a computer/laptop via USB**

You can connect your OPTRON *vision* to a desktop computer or a laptop via USB 2.0 by using the OPTRON View software and the OPTRON USB converter (optional accessory). Please contact OPTRON Assistive Technologies (1-888-567-8766) for more information about this setup.



**Please note:**

- **When using the *Direct Out Port* on your OPTRON *vision* as the connection port to a display, you cannot use the brightness dimmer, the line reader, reversed polarity nor monochrome color.**
- **As compatibility problems with computers and computer components might still occur, OPTRON Assistive Technologies cannot guarantee the proper function of this setup.**

## **2.7 Connecting the OPTRON *vision* to a computer/laptop via TV Card**

You can connect your OPTRON *vision* to a desktop computer or a laptop through a TV card. To do so, your computer/laptop has to be equipped with an TV/video card (internal, PCMCIA or external). To connect the two devices, use the the *Direct Out Port* on your OPTRON *vision*. A composite video cable is required

---

(not included). For setup instructions please refer to your TV card's user guide.

**Please note:**



- **When using the *Direct Out Port* on your **OPTRON vision** as the connection port to a display, you cannot use the brightness dimmer, the line reader, reversed polarity nor monochrome color.**
- **As compatibility problems with computers and computer components might still occur, **OPTRON ASSISTIVE TECHNOLOGIES** cannot guarantee the proper function of this setup.**



## 3 WORKING WITH THE OPTRON VISION

### 3.1 Desktop/Close distance viewing

- When using the OPTRON *vision* for close distance viewing like reading or writing on the desk the *Close-Up Lens* has to be attached to the bottom of the *Camera Head* over the camera lens opening (working position). The *Close-Up Lens* snaps on to the *Camera Head* magnetically and adjusts itself into the right position automatically.
- Adjust the picture on your display by turning the *Camera Base Ring* within the *Camera Head* until it is upright (Twist-Cam® Technology).



**Please note:**

- **Do not force the *Camera Head* or the *Camera Socket Ring* beyond the limitation points as this can also seriously damage your OPTRON *vision*.**

### 3.2 Using the OPTRON *vision* to see objects at a larger distance

- When using the OPTRON *vision* to objects at a larger distance, remove the *Close-Up Lens* from the camera lens opening and put it in the park position at the *Camera Base Ring*. The *Close-Up Lens* snaps on to the *Camera Head* magnetically and adjusts itself into the correct position automatically.
- Adjust the picture on your display by turning the *Camera Base Ring* on the *Camera Head* until it is upright (Twist-Cam® Technology).
- Move the camera to the left and the right by turning the *Swivel Arm* clockwise or counter-clockwise.

### **3.3 Zooming in and out**

- Adjust the image size by pushing the *Zoom in* or the *Zoom out* button.

### **3.4 Auto focus on/off**

- If you encounter a situation where you do not want to use the auto focus function (like writing, for example), you can turn the auto focus off by pushing the *Auto Focus ON/OFF* button. The *Auto Focus Control Light* will turn off.
- To turn the auto focus function back on, push the *Auto Focus On/OFF* button again. The *Auto Focus Control Light* will turn on again.

### **3.5 Reversed Polarity**

- To reverse the picture's polarity into negative (dark colors in the original will become light on the screen and vice versa), push the *Reverse Polarity Toggle* on the *Control Panel*.
- Push and release the button and the picture will change back to positive on the screen.

### **3.6 Selecting Monochrome Colors**

The OPTRON *vision* offers several options of monochrome colors to enhance the contrast.

- Choose your preferred setting by turning the *Monochrome/Color Selection Knob* on the *Control Panel Base*. The selection can be combined with reversed polarity to increase the number of options even further.

- When selecting a different monochrome color, you might have to adjust the brightness by turning the *Brightness* knob.

### **3.7 Changing the clamp height**



Upon delivery, the spacing block on the *Clamp* is located between the red clamp base and the notch base.



If a table is so thick that the *Clamp* cannot be attached to it, open the two screws on the top of the *Clamp* base with a Phillips screw driver (not included).

Insert the screws into the spacing block.



Put the *Clamp* base between the spacing block and the notch base and tighten the screws. The *Clamp* is now ready to be used on a thicker table board.